
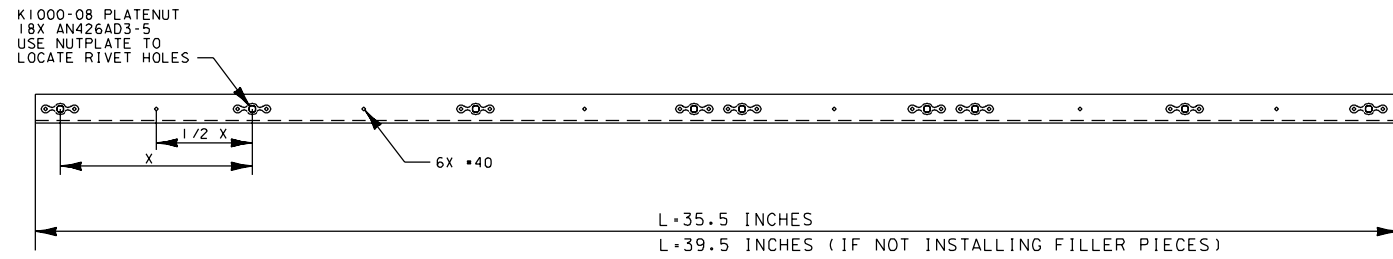




PF-1 (PANEL FRAME)

SEE DETAIL "A"

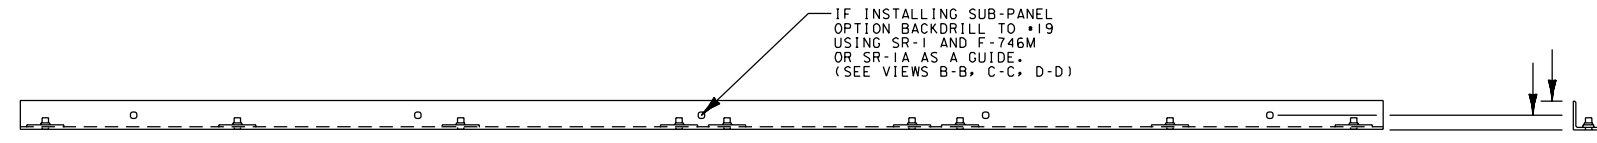


PA-1 (REINFORCEMENT ANGLE)

MAKE FROM AA6-063 X3/4 X3/4 (ONE REQUIRED)

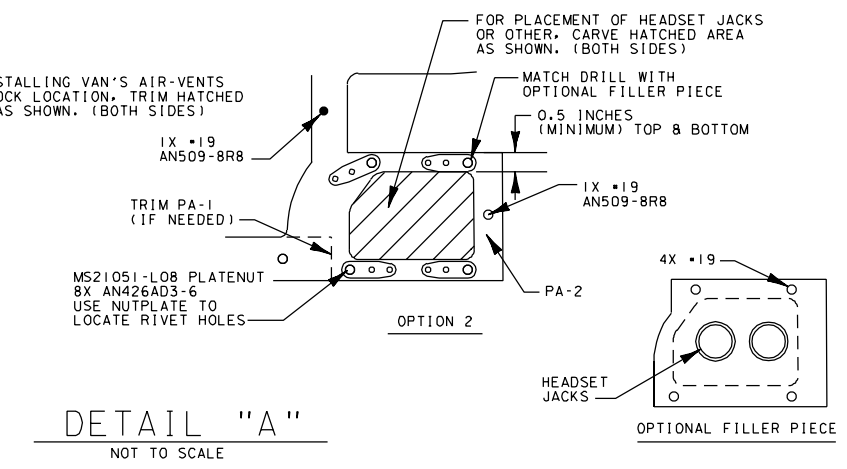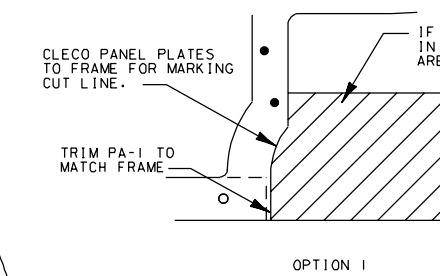



DETAIL "A"

NOT TO SCALE

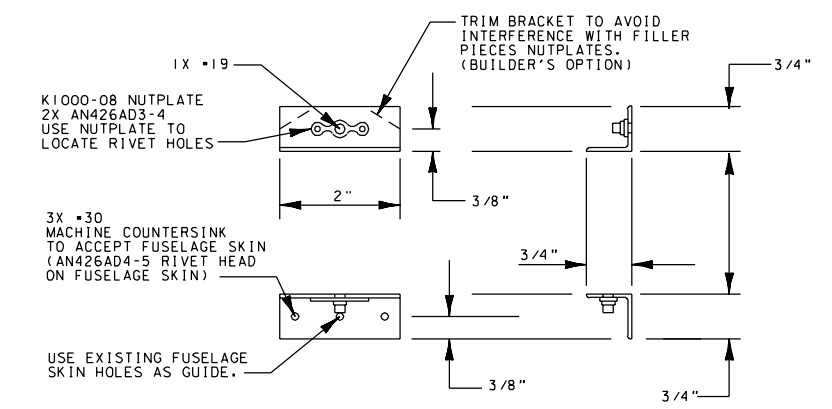


PA-2 (ANGLE)

MAKE FROM AA6 063 X 3/4" X 3/4" (2 REQUIRED)

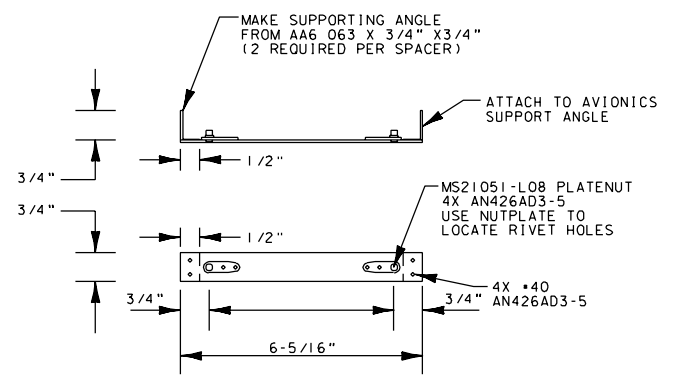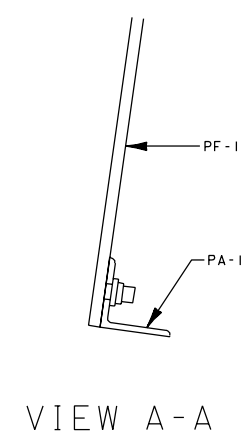

SP-1 (SPACER)

MAKE FROM DISCARDED MATERIAL OF CENTER PLATE (0 TO 2 REQUIRED, SEE SAMPLE INSTALLATION)

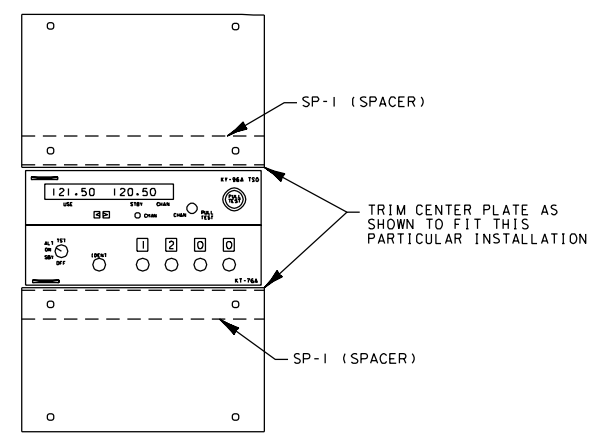

CENTER PLATE SAMPLE INSTALLATION

<b>MODULAR PANEL</b>	DRAWN BY:	F. LEFLER
	DATE:	SEPT 1, 2002
<b>PANEL INSTALLATION FOR RV-7/9 SLIDERS</b>		SHEET NO
		1