

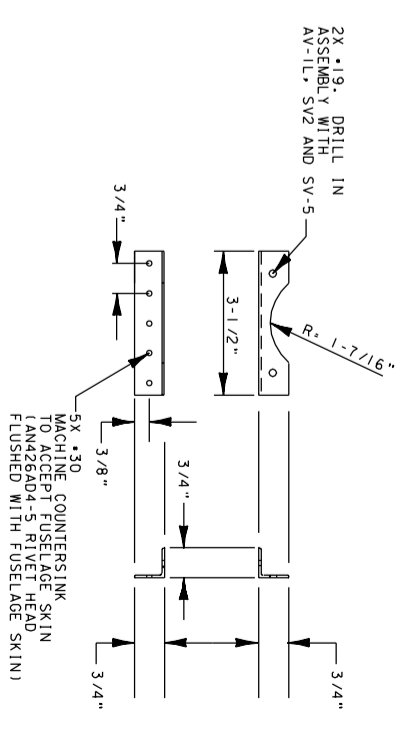
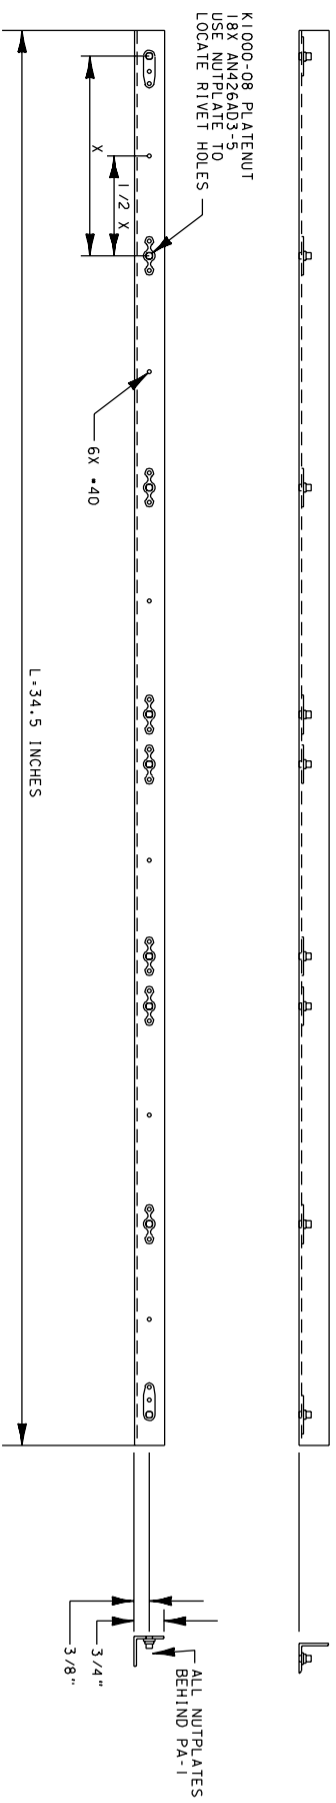
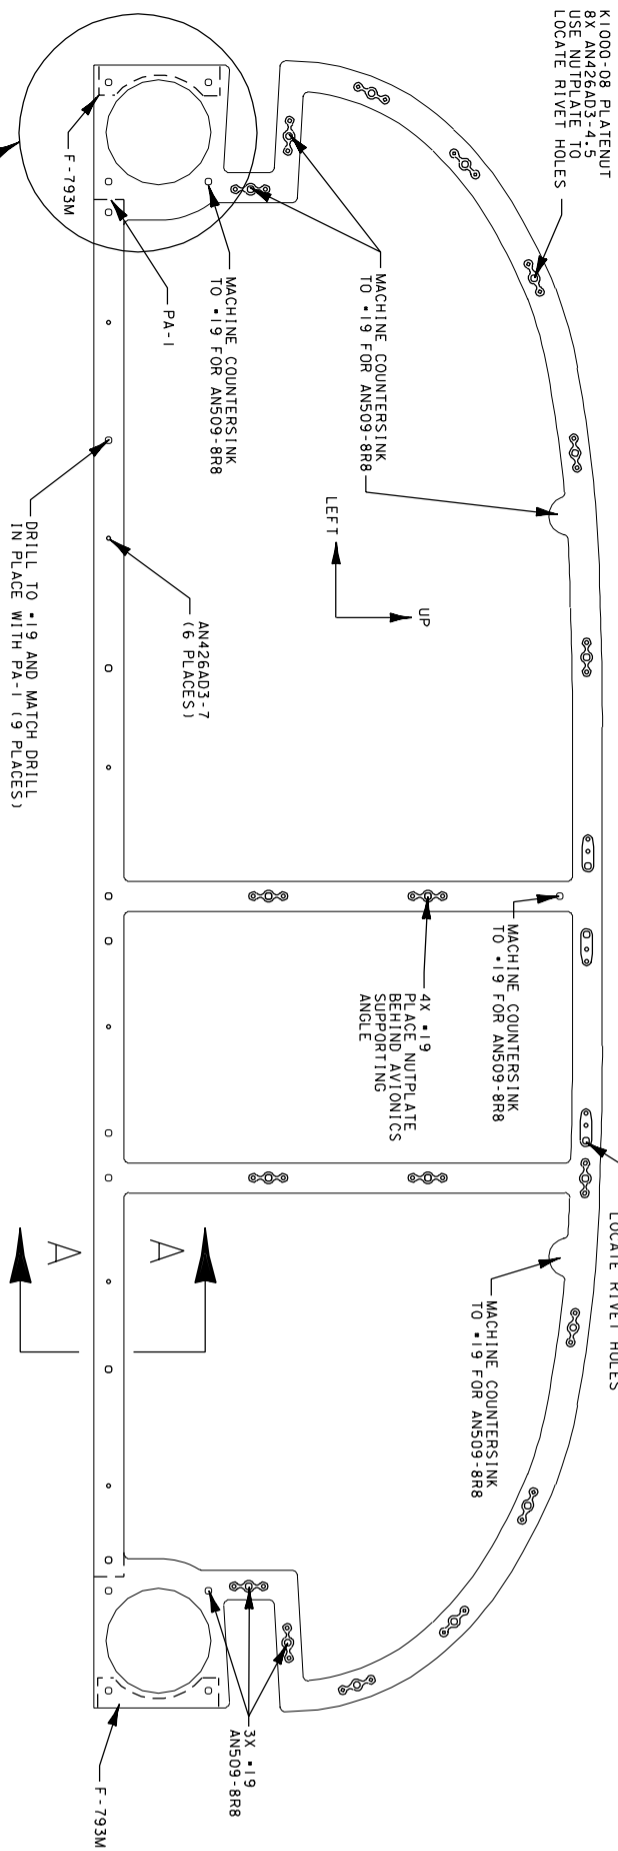


NUTPLATE LOCATIONS SHOWN ARE ONLY RECOMMENDATIONS. DETERMINE NUTPLATE LOCATIONS AFTER MOUNTING FRAME TO FUSELAGE. (NUTPLATE SPACING SHALL BE 4 TO 6 INCHES).

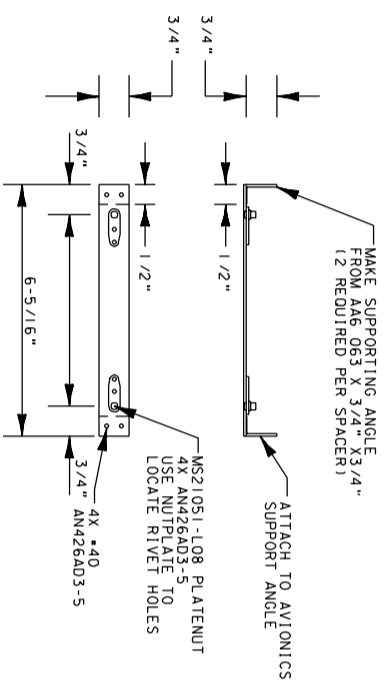


F-793M (ANGLE)
 MAKE FROM AA6 063 X 3/4" X 3/4" (2 REQUIRED)

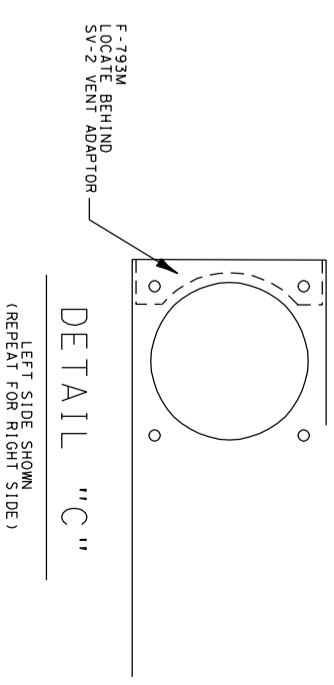


SP-1 (SPACER)

MAKE FROM DISCARDED MATERIAL OF CENTER PLATE
 TO TO 2 REQUIRED. SEE SAMPLE INSTALLATION)

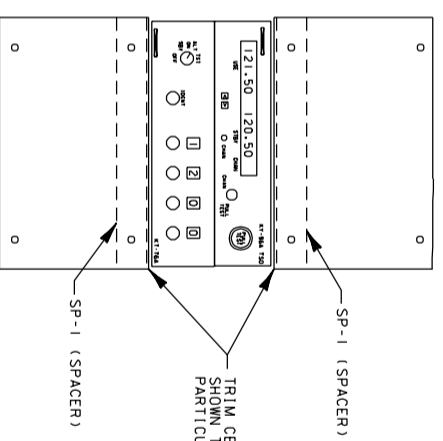

CENTER PLATE
 SAMPLE INSTALLATION

VIEW A-A

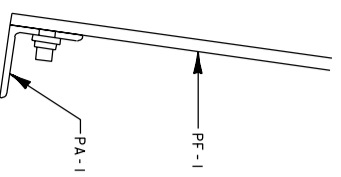

MODULAR PANEL	DRAWN BY:	F. LEFLER
	DATE:	MAY 1, 2005
PANEL INSTALLATION FOR RV-6 SLIDER XL	SHEET NO	1